





## Startup Guide/Guide de démarrage


1

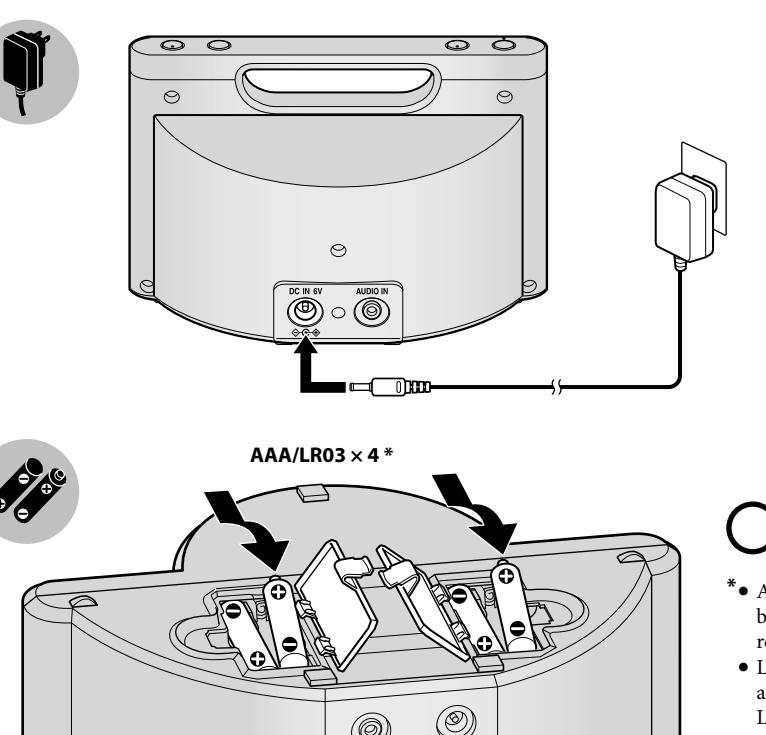


2

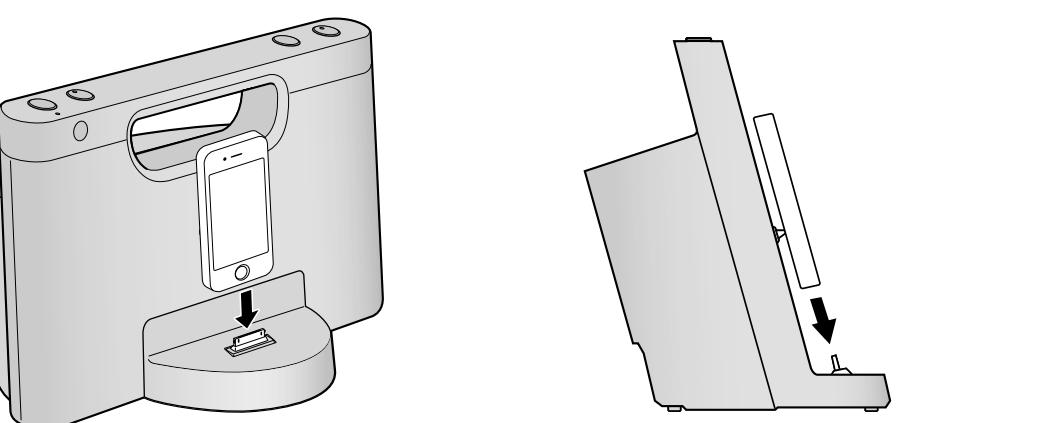


3

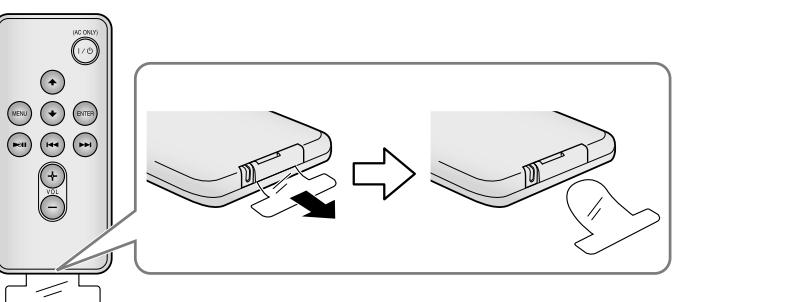

4

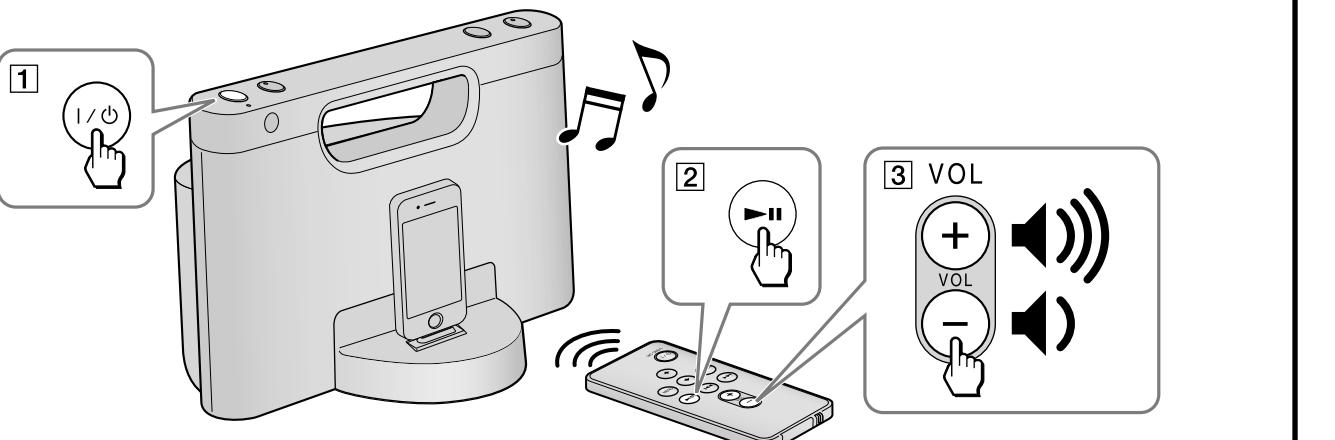

The VOLUME + and ▶/II buttons have a tactile dot.  
Les touches VOLUME + et ▶/II comportent un point tactile.

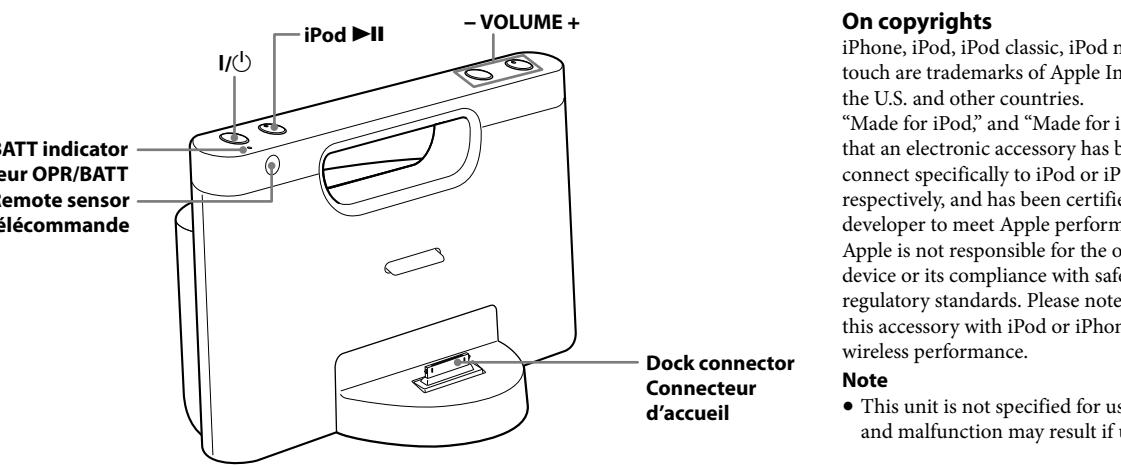

The VOLUME + and ▶/II buttons have a tactile dot.  
Les touches VOLUME + et ▶/II comportent un point tactile.

## English

## Operations

### How to handle an iPod

To set an iPod


- 1 Set an iPod on the dock connector. The dock connector can be tilted slightly. For details, see "How to handle an iPod".
- 2 Press ▶/II. When using batteries, press I/O on the unit, then press ▶/II. The iPod begins playback. You can operate the connected iPod via this unit or the iPod itself.
- Notes**
- If the App to link with this unit is not downloaded to your iPod touch/iPhone, a pop-up message prompting you to download D-Sappli may appear repeatedly. Deactivate the App's link function to stop the pop-up message.
  - To deactivate the App's link function: Connect the AC adaptor, and then press I/O to turn off the unit. Remove your iPod touch/iPhone from the dock connector. While holding down ▶/II, also press and hold I/O on the unit for at least 2 seconds. (The OPR/BATT indicator flashes twice when the function is deactivated.)
  - To re-activate the App's link function, repeat the above steps. (The OPR/BATT indicator flashes once when the function is activated.)

To remove the iPod

- For details, see "How to handle an iPod".
- To adjust the volume**
- Press VOLUME +/- (VOL +/- on the remote).  
Tip
- The OPR/BATT indicator flashes three times when the sound is set to either maximum or minimum volume.
- ENTER**
- Execute the selected menu item or begin playback.
- VOL +/- (Volume plus/minus)**
- Adjust the volume.
- Note**
- Some operations may differ or may not be available for different models of iPod.

### When to replace the battery

With normal use, battery life (CR2025) should last for about 6 months. When the remote can no longer operate the unit, replace the battery with a new one.

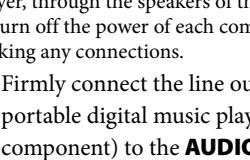


**Note**

- If you are not going to use the remote for a long time, remove the battery to avoid any damage that may be caused by leakage and corrosion.

### Remote control

Before using the supplied remote for the first time, remove the insulation film. Aim the remote at the (Remote sensor) of the unit. The OPR/BATT indicator flashes when the remote's signal is received.

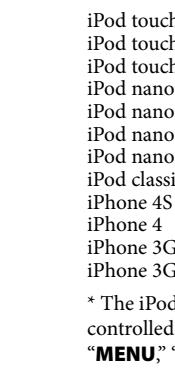

### Compatible iPod/iPhone models

The compatible iPod/iPhone models are as follows.

Update the software of the iPod/iPhone to the latest version before using it with this unit.

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod nano (6th generation)\*
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod classic
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G

\* The iPod nano (6th generation) cannot be controlled by the remote when the command of "MENU", "◀", "▶", and "ENTER" is pressed.

The VOLUME + and ▶/II buttons have a tactile dot.

## On copyrights

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

## Notes

• This unit is not specified for use with an iPad, and malfunction may result if used with one.

## About App

A dedicated Dock App for iPod touch/iPhone available at Apple App Store. Search for "D-Sappli" and download the free App to find out more about the functions.

## Features

- D-Sappli includes various timer functions: Alarm, Music Play Timer, and Sleep Timer.
- You can set up to 10 alarms, using songs in iPod or Preset Sound in D-Sappli for the alarm sound.

The Music Play Timer allows you to play/pause desired music at a desired time. The Sleep Timer allows you to specify a time at which to stop music playback. The Music Play Timer and Sleep Timer work in combination with the power supply of the unit.

Music Play Timer, Sleep Timer and Alarm are available only when D-Sappli is activated.

- D-Sappli also includes a clock display enlarge feature.

## Notes

- If the App to link with this unit is not downloaded to your iPod touch/iPhone, a pop-up message prompting you to download D-Sappli may appear repeatedly.
- Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.

• To deactivate the App's link function: Connect the AC adaptor, and then press I/O to turn off the unit. Remove your iPod touch/iPhone from the dock connector. While holding down ▶/II, also press and hold I/O on the unit for at least 2 seconds. (The OPR/BATT indicator flashes twice when the function is deactivated.)

• To re-activate the App's link function, repeat the above steps. (The OPR/BATT indicator flashes once when the function is activated.)

## Operating an iPod

1 Set an iPod on the dock connector. The dock connector can be tilted slightly. For details, see "How to handle an iPod".

## 2

- 2 Press ▶/II. When using batteries, press I/O on the unit, then press ▶/II. The iPod begins playback. You can operate the connected iPod via this unit or the iPod itself.

## Notes

- If a pop-up message appears on the display of the iPod touch or iPhone, see "About App".
- If the battery of the iPod is extremely low, charge it for a while before operation.

• Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.

• For details of environmental conditions for operating the iPod, check the website of Apple Inc.

## To remove the iPod

For details, see "How to handle an iPod".

## To adjust the volume

Press VOLUME +/- (VOL +/- on the remote).  
Tip

- The OPR/BATT indicator flashes three times when the sound is set to either maximum or minimum volume.

## ENTER

• Execute the selected menu item or begin playback.

## VOL +/- (Volume plus/minus)

• Adjust the volume.

## Note

- Some operations may differ or may not be available for different models of iPod.

## When to replace the battery

With normal use, battery life (CR2025) should last for about 6 months. When the remote can no longer operate the unit, replace the battery with a new one.

**Notes**

- Il est possible d'insérer un iPod avec un boîtier ou un étui dans cet appareil. Toutefois, si le boîtier ou l'étui compromet le raccordement, retirez le boîtier ou l'étui de votre iPod avant de l'insérer sur le connecteur d'accueil.

• Lorsque vous installez ou retirez l'iPod, tenez-le selon le même angle que le connecteur d'accueil sur l'appareil. Ne tirez pas le iPod trop loin vers l'avant.

• Lorsque vous installez ou retirez l'iPod, tenez-le fermement l'appareil.

• Ne tournez pas ni pincez pas le iPod car vous pourriez endommager le connecteur.

• Retirez le iPod lors du transport; sinon, cela pourrait causer un problème de fonctionnement.

• Si le iPod n'atteint pas la pièce d'appui située à l'avant de l'appareil, fixez le coussin fourni sous la pièce d'appui.

**Remarques**

- Si vous prévoyez de ne pas utiliser la télécommande pendant une période prolongée, retirez-en la pile afin d'éviter tout dommage pouvant résulter d'une fuite de la pile ou de la corrosion.

## Connecting optional components

You can enjoy the sound from an optional component, such as a portable digital music player, through the speakers of this unit. Be sure to turn off the power of each component before making any connections.

- 1 Firmly connect the line output jack of a portable digital music player (or other component) to the AUDIO IN jack on the back of the unit, using a suitable audio connecting cable (not supplied).

## 2

Press I/O to turn on the unit.

## 3

Turn the connected component on.

## 4

Play the connected component.

The sound from the connected component is output from the speakers of this unit.

## Notes

- The necessary type of audio connecting cable depends on the optional component. Make sure to use the correct type of cable.

• If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the connected component.

• When playing an optional component connected to the AUDIO IN jack, stop playback of an iPod.

• Disconnect the audio connecting cable from the unit when it is not in use.

**Télécommande**

Retirez la feuille de protection avant d'utiliser la télécommande fournie pour la première fois. Pointez la télécommande vers le capteur (Capteur de télécommande) de l'appareil. L'indicateur OPR/BATT clignote lors de la réception du signal de la télécommande.

## Raccordement d'appareils en option

Vous pouvez raccorder un appareil en option, tel qu'un lecteur de musique numérique portatif, pour en écouter le son par l'intermédiaire des haut-parleurs de cet appareil. Assurez-vous d'éteindre chaque appareil avant d'effectuer les raccordements.

## 1

Raccordez la prise de sortie de ligne d'un lecteur de musique numérique portatif (ou d'un autre appareil) solidement à la prise AUDIO IN située à l'arrière de l'appareil en utilisant un câble de raccordement audio approprié (non fourni).

## 2

Appuyez sur I/O pour mettre l'appareil en marche.

## 3

Mettez l'appareil raccordé en marche.

## 4

Démarrer la lecture sur l'appareil raccordé.

Le son de l'appareil raccordé est alors restitué par les haut-parleurs de cet appareil.

## Remarques

- Le type de câble de raccordement audio requis varie selon l'appareil en option. Assurez-vous d'utiliser un type de câble approprié.

• Si le niveau de volume est faible, commencez par régler le volume de l'appareil. Si le niveau de volume est toujours trop faible, réglez le volume de l'appareil raccordé.

• Pendant la lecture d'un appareil en option raccordé à la prise AUDIO IN, arrêtez la lecture du iPod.

• Déconnectez le câble de raccordement audio de l'appareil lorsqu'il n'est pas utilisé.

## À propos des droits d'auteur

iPhone, iPod, iPod classic, iPod nano et iPod touch sont des marques de Apple Inc., déposées aux États-Unis et dans d'autres pays/régions. "Made for iPod" et "Made for iPhone" signifient qu'un accessoire électronique a été conçu pour être connecté spécifiquement à un iPod ou un iPhone, et qu'il a été certifié par le développement comme étant conforme aux normes de performances Apple. Apple n'est pas responsable du bon fonctionnement de cet appareil ni de sa conformité aux normes et réglementations de sécurité. Veuillez noter que l'utilisation de cet accessoire avec un iPod ou un iPhone peut affecter les performances des transmissions sans fil.

## Remarque

- Comme cet appareil n'est pas conçu pour l'utilisation avec un iPad, un problème de fonctionnement pourrait résulter d'une telle utilisation.

## ► (Avance)

• Permet de passer à la plage suivante. Le connecteur d'accueil peut être incliné légèrement. Pour plus de détails, consultez la section « Manipulation d'un iPod ».

## ► (Retour)

• Permet de retourner à la plage précédente. Pendant la lecture, cette opération permet de retourner au début de la plage en cours. Pour retourner à la plage précédente, appuyez deux fois.

## ► (Lecture)

• Maintenez la touche enfoncée pendant l'écoute pour localiser un point souhaité.

## ► (Arrêt)

• Permet de retourner à la plage précédente. La lecture commence sur le iPod. Vous pouvez faire fonctionner le iPod raccordé au moyen de cet appareil ou du iPod lui-même.

## ► (Mise en veille)

• La fonction Réveil en musique vous permet d'écouter/de mettre en pause la musique souhaitée à l'heure de votre choix. La fonction Mise en veille vous permet de spécifier une heure à laquelle arrêter la lecture de la musique. Les fonctions Réveil en musique, Mise en veille et Alarme sont disponibles uniquement lorsque D-Sappli est active.

• D-Sappli comprend également une fonction d'agrandissement de l'affichage d'horloge.

## Remarques

- Si un message contextuel apparaît sur l'écran du iPod touch ou iPhone, consultez la section « Manipulation d'un iPod ».

• Si la pile de l'iPod est extrêmement faible, chargez-la un moment avant l'utilisation.

• Sony décline toute responsabilité en cas de perte ou d'altération de données enregistrées sur un iPod lors de l'utilisation d'un iPod raccordé à cet appareil.

## ► (Lecture/Pause)

• Démarrer la lecture d'un iPod. Appuyez à nouveau pour faire une